



LG LX150 Screen Replacement

Written By: Tye Barba



INTRODUCTION


Use this guide to remove the LG LX150's sceen.



TOOLS:


- [Spudger](#) (1)
-

Step 1 — Front Cover

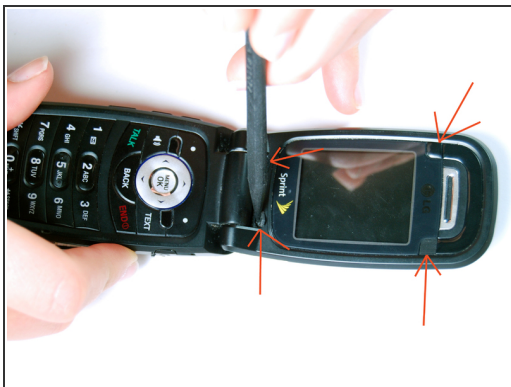


- Use the spudger to pry out the indicated rubber squares.
- Use the #0 Phillips screwdriver to take out the revealed screws.


Step 2

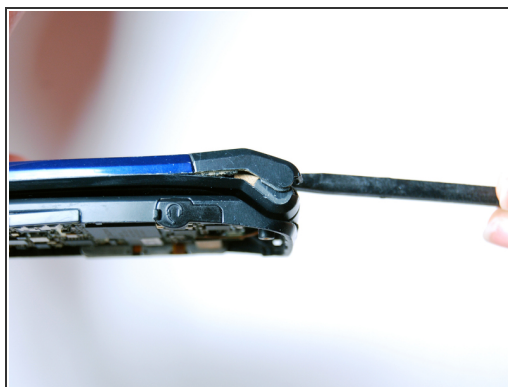

- Carefully lodge the spudger between the face plate and the hinge mechanism.
- Gently pry the face plate until it releases from place holders.

Step 3 — Screen

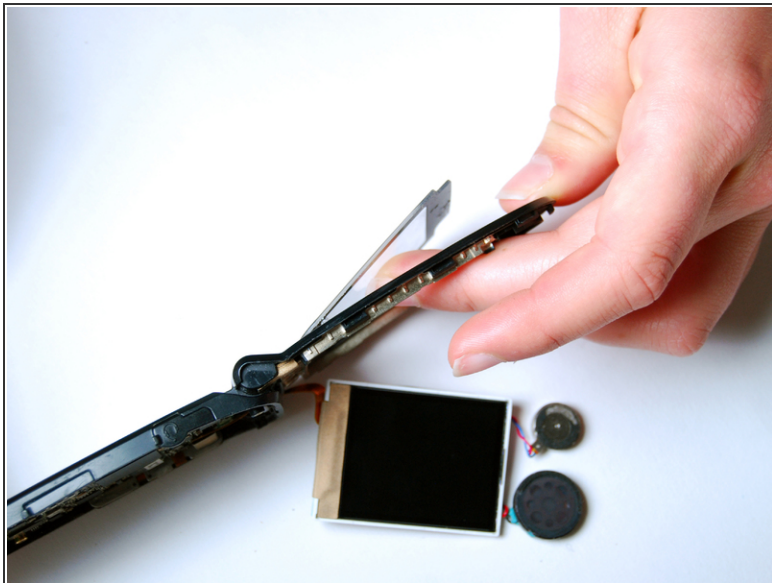

 Apply even amounts of force upon removing screen, otherwise cracking may occur.

- Gently loosen the screen from its adhesive by pressing around the screen's rear perimeter with a spudger. Place upward pressure in crevices between face plate and screen.
- Carefully use both thumbs and apply pressure to the back of the screen to pop out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 05:41:28 AM.